


# Assembly Instructions



1. Isolate cold water supply by turning valve to horizontal.
2. Remove flexi and allow water to drain.




3. Place silicone grommet into two way valve.

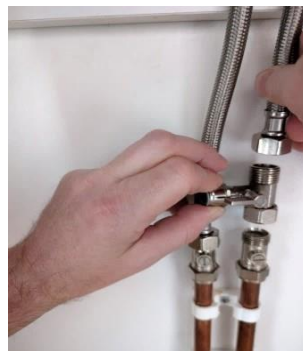

4. Fit 2 way valve onto cold isolation valve.
5. Fit flexi onto 2 way valve



6. Tighten both fittings with a spanner

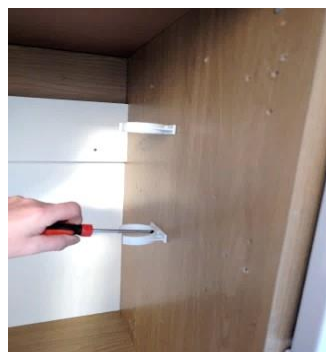

7. Locate a suitable position for housing and fit clips, note this can be installed horizontally or vertically



8. Unscrew housing and remove protective sleeve from the filter. Refit housing together ensuring a water tight seal



9. Fit housing into clips.
10. Cut pipe to the required length as to connect the 2 way valve to the inlet of the filter housing



11. Use supplied pipe cutters to cut pipe to length, ensuring the pipe is symmetrically round.


**WARNING** Cutter has sharp blade



12. Push the pipe 20mm into the housing inlet fitting, Note the flow directional arrow on the housing



13. When the pipe is fully inserted, pull on the pipe and insert the blue retaining clip.

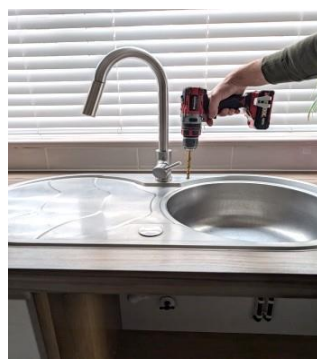

- 14 A. Drill a 12 mm hole into either the sink or worktop, ensuring the tap inlet will be accessible under the counter



- 14 B. option to fit tap into worktop. Ensuring tap inlet can be accessible.



15. Fit tap into hole with the



16. Assemble tap inlet fitting



17. Cut pipe to required length



18. Turn on the cold water

option to use the tap base plate  
or not.

with blue clip added prior for  
ease of fitting to tap

to connect filter outlet to tap  
fitting . Fit as steps 12 & 13

isolation valve and the two way  
valve to complete.